


# Fitting Instructions #2836IS

Toyota Hilux, Prado, 4 Runner, Cruiser / Lexus GX

## Panhard Rod Bushing



- Jack the vehicle up and support on jack stands;
- Remove panhard rod;
- Remove original shell/bush part from the housing with the use of a hydraulic press and suitable pressing tools;
- Clean housing areas to remove any old original bushing materials before installing new bushes;
- Apply the grease supplied to the housing and the outside of the bush, and then push the new bushes in as shown in the picture;
- Apply the white grease supplied to the bore of the bush and the outside of the crush tube, then push in the crush tube as shown in the picture.
- Refit the panhard rod to the vehicle and tighten all bolts to manufactures torque settings;
- Carry out a wheel alignment.

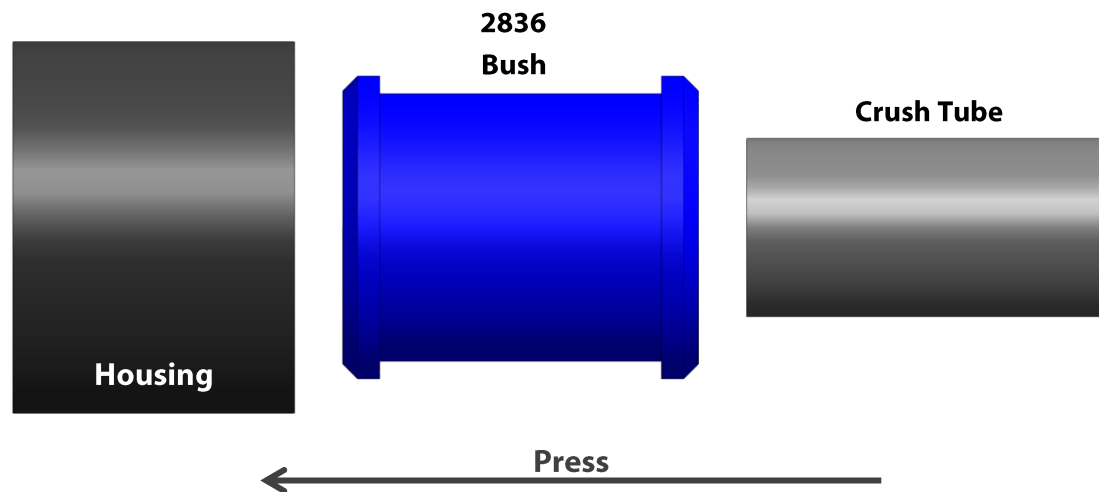

**Note:** Polyurethane bushings must be fitted to both sides of the vehicle. This kit should be installed by a Qualified Motor Mechanic.