

Fitting Instructions #4891IS

Mitsubishi Pajero NM, NP

Rear Upper Control Arm Inner Bushes

- Jack the vehicle up and support on jack stands/hoist;
- Remove the original brake line retaining clip, see Figure 02;
- Install the '4954' brake line spacer, see Figure 03;
- Install the original brake line retaining clip onto the '4954' spacer, see Figure 04.

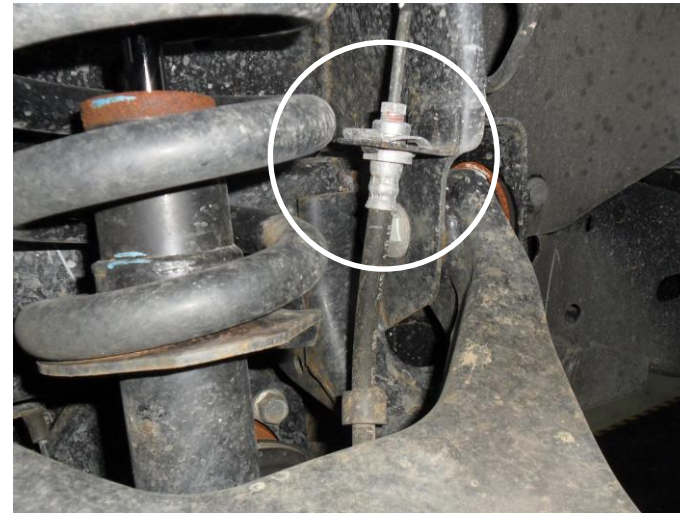


Figure 01 – Brake line, original setting

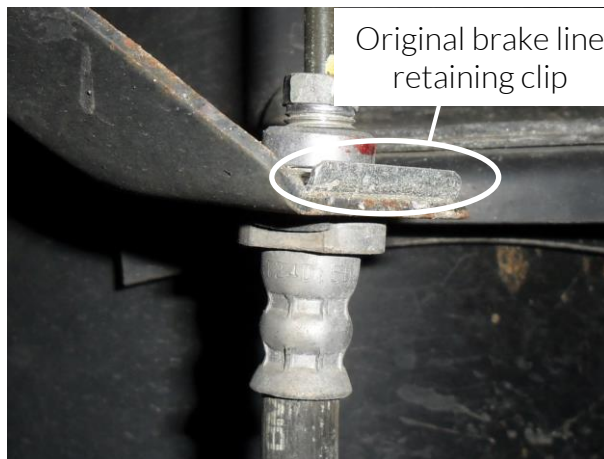


Figure 02 – Brake line, original setting



Figure 03 – Installing '4954' brake line spacer

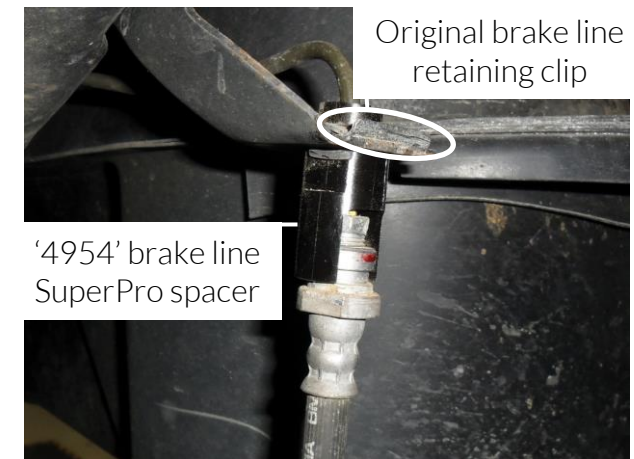


Figure 04 – Installed '4954' brake line spacer